

# Get and activate your license key



See page 1




Siehe Seite 5

## Notes applicable for the software:

- stute.x1D Loudspeaker Designer V1.7 or above
- stute.x1A Audio Analyzer V1.7 or above
- DCX.Server V1.1 or above

**Note: A license can activated 3 times.**

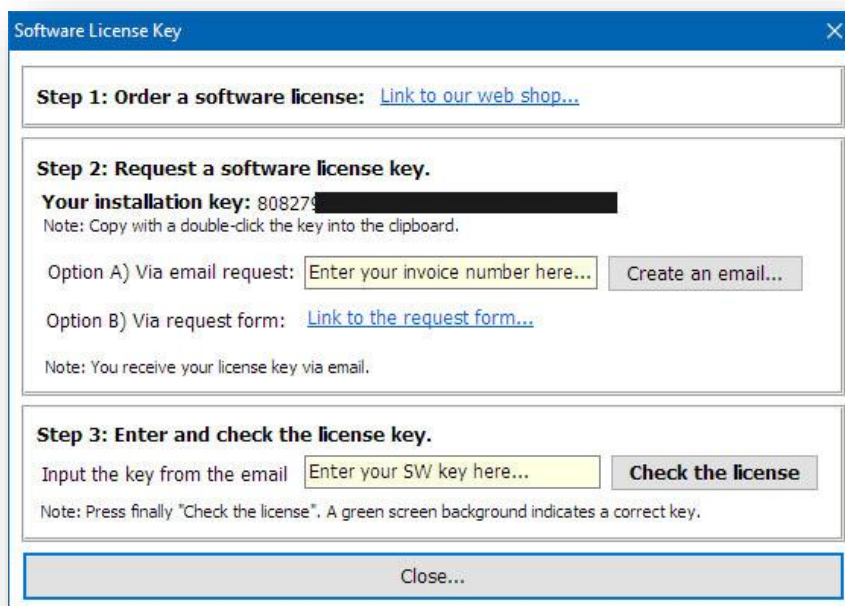

**Software License Key** [X]

**Step 1: Order a software license:** [Link to our web shop...](#)

**Step 2: Request a software license key.**  
**Your installation key:** 80827: [REDACTED]  
Note: Copy with a double-click the key into the clipboard.

Option A) Via email request:

Option B) Via request form: [Link to the request form...](#)


Note: You receive your license key via email.

**Step 3: Enter and check the license key.**  
Input the key from the email

Note: Press finally "Check the license". A green screen background indicates a correct key.

## Get the software

- The software products are available as a download from here, <https://www.stute-engineering.de/index.php/download>. The software work as a trial version without a valid license key.
- Install and open your software product, e.g. stute.x1A
- During the start procedure a software license screen is displayed

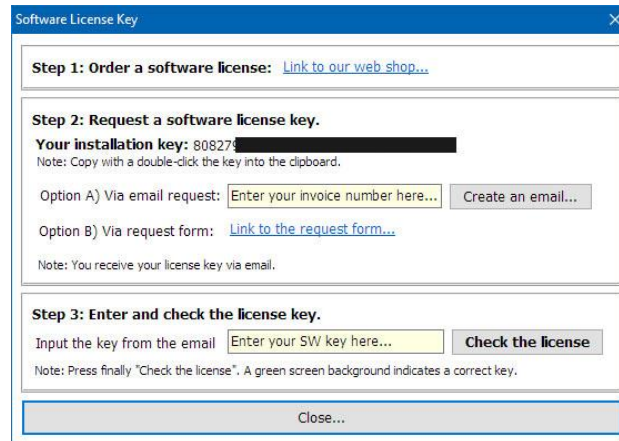


### Step 1: Order a software license

Order a license from our web store, if not already done. Store: <https://www.stute-engineering.de/shop/>

### Step 2: Request a software license key

#### Option A) Via email request

- Enter your **invoice** or **online shop order number** here

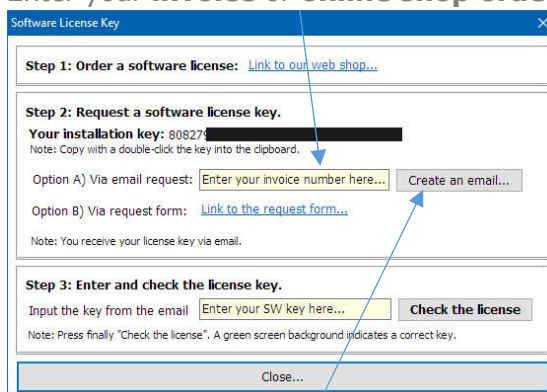


- Press the button "Create an email..."
- An Email is created within your default Email program
  - Transmit the Email to us (correct address is per default entered)

➔ You get an email with the software license key within 1-2 business days.

## Option B) Request via web form

- Double-click at the installation key (action copied the key into the clipboard)

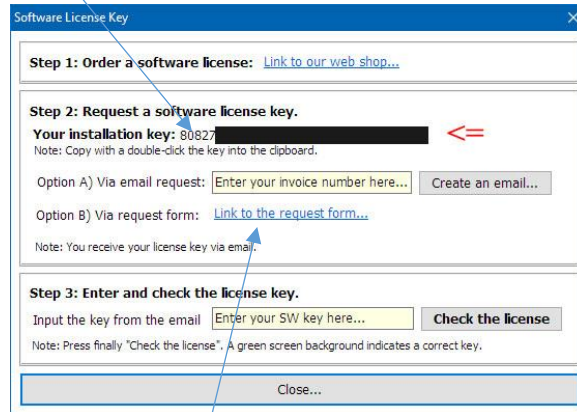

- Click at the displayed Link "Link to the request form..."
- Select a software product
- Paste the installation key into the text field "Your installation key" and enter your invoice or online shop order number here: "Your invoice number"
- Enter your name and email address

### Get your software license key:

For your request we need the **invoice number** to the ordered product and the **Installation key**. Please enter the data in the fields below and transmit your request.

Select a software product \*


Your invoice number \*

Your installation key \*

Your name \*

Your email address \*

I agree with the storage of the entered data / Ich stimme der Speicherung der eingegebenen Daten zu

Safety  I'm not a robot 

- Transmit the form


Note: Alternative access to the form via our home page, menu Contact/Software license key

➔ You get an email with the software license key within 1-2 business days.

## Step 3: Activate your software license

Pre-condition: You have already received the license key via email.

- Enter the key in the textbox “**Enter your SW key here...**”

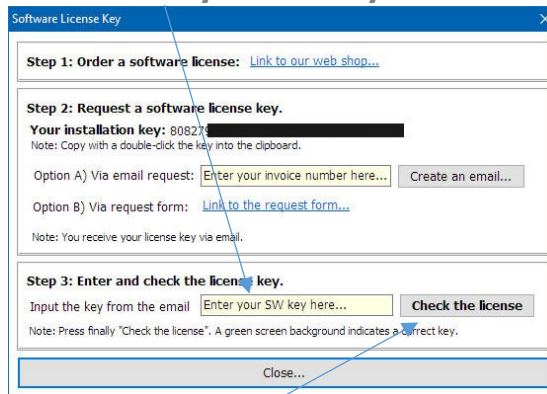

- Press the button “**Check the license**”
- **The background color of the screen changes to green, if the key is valid**
- Press the “Close” button

**Your software license is activated and the DEMO limitations are removed.**

# Lizenz-Key erhalten und aktivieren




## Anwendbar für die Software

- stute.x1D Loudspeaker Designer V1.7 oder höher
- stute.x1A Audio Analyzer V1.7 oder höher
- DCX.Server V1.1 oder höher

**Hinweis: Eine Lizenz kann bis zu 3-mal aktiviert werden.**

## Software Lizenz erhalten und aktivieren

- **Die Software erhalten Sie hier als Download, <https://www.stute-engineering.de/index.php/download>.** Ohne eine gültige Software-Lizenz können Sie die Software als eingeschränkte Demo-Version nutzen.
- Installieren und öffnen Sie ein Softwareprodukt, z.B. stute.x1A
- Während der Startprozedur der Software wird der Lizenz-Key Bildschirm angezeigt
- Weiter mit Schritt 1)

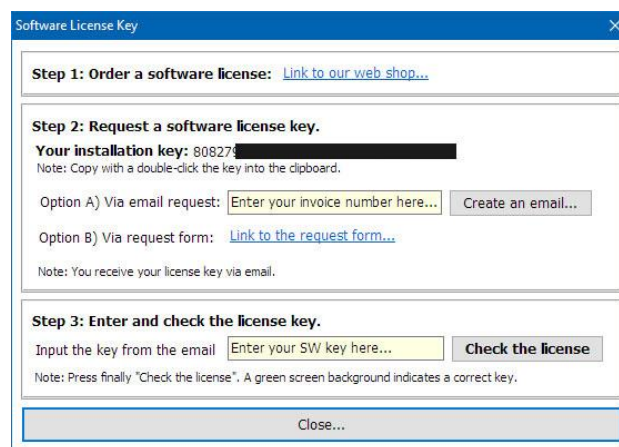

The screenshot shows a dialog box titled "Software License Key" with three main steps:

- Step 1: Order a software license:** Includes a link "Link to our web shop...".
- Step 2: Request a software license key.** Shows "Your installation key: 808274" followed by a redacted key. A note says "Copy with a double-click the key into the clipboard." It offers two options: Option A) "Via email request" with an input field "Enter your invoice number here..." and a "Create an email..." button; Option B) "Via request form" with a link "Link to the request form...". A note says "Note: You receive your license key via email."
- Step 3: Enter and check the license key.** Includes an input field "Enter your SW key here..." and a "Check the license" button. A note says "Note: Press finally 'Check the license'. A green screen background indicates a correct key."

A "Close..." button is located at the bottom of the dialog.

## Schritt 1: Software Lizenz kaufen

Kaufen Sie eine Software Lizenz über unseren Online-Shop: <https://www.stute-engineering.de/shop/>, falls nicht schon erfolgt.

## Schritt 2: Lizenz-Schlüssel anfordern

### Option A) Per Email

- Geben Sie Ihre Rechnungs- oder Webshop Bestellnummer hier ein

Software License Key

**Step 1: Order a software license:** [Link to our web shop...](#)

**Step 2: Request a software license key.**  
**Your installation key:** 80827[REDACTED]  
 Note: Copy with a double-click the key into the clipboard.

Option A) Via email request:

Option B) Via request form: [Link to the request form...](#)

Note: You receive your license key via email.

**Step 3: Enter and check the license key.**  
 Input the key from the email

Note: Press finally "Check the license". A green screen background indicates a correct key.

- Betätigen Sie die Taste "Create an email..."
- Eine Email mit den benötigten Daten wird in Ihrem Standard-Email Programm erstellt
- Senden Sie die Email an die voreingestellte Email-Adresse

➔ Sie erhalten den Lizenz-Schlüssel innerhalb 1-2 Arbeitstagen

### Option B) Anfrage via Online-Formular

- Kopieren Sie den Installations-Key in die Windows Zwischenablage mit einem Maus-Doppelklick auf den Key

Software License Key

**Step 1: Order a software license:** [Link to our web shop...](#)

**Step 2: Request a software license key.**  
**Your installation key:** 80827[REDACTED] <=>  
 Note: Copy with a double-click the key into the clipboard.

Option A) Via email request:

Option B) Via request form: [Link to the request form...](#)

Note: You receive your license key via email.

**Step 3: Enter and check the license key.**  
 Input the key from the email

Note: Press finally "Check the license". A green screen background indicates a correct key.

- Öffnen Sie das Online-Formular via a Klick auf den Text "Link to the request form..."
- Wählen Sie ein Softwareprodukt
- Kopieren Sie den Installations-Key in das Feld "Your installation key" (Strg-V)
- Geben Sie Ihre Rechnungsnummer oder Webshop Bestellnummer ein, Feld "Your invoice number"
- Geben Sie Ihre Email Adresse und Ihren Namen an

**Get your software license key:**

For your request we need the **invoice number** to the ordered product and the **installation key**. Please enter the data in the fields below and transmit your request.

Select a software product \*

Your invoice number \*

Your installation key \*

Your name \*

Your email address \*

I agree with the storage of the entered data / Ich stimme der Speicherung der eingegebenen Daten zu

Safety  I'm not a robot

- Senden Sie das Formular ab

 
Hinweis: Alternativer Zugriff auf das Formular über unsere Homepage: [Contact/Software license key](#)

➔ Sie erhalten den Lizenz-Schlüssel innerhalb 1-2 Arbeitstagen

### Schritt 3: Aktivieren Sie Ihre Software Lizenz

Voraussetzung für den letzten Schritt: Der Lizenz-Schlüssel wurde Ihnen per E-Mail zugesendet.

- Geben Sie den Lizenz Schlüssel in das Feld **"Enter your SW key here..."**

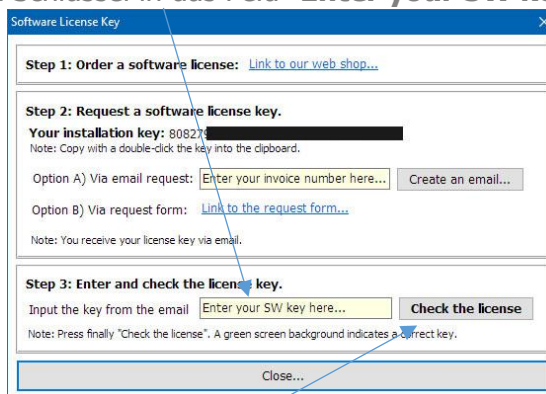

- Betätigen Sie die Taste **"Check the license"**
- **Der Fensterhintergrund wechselt auf Grün, wenn der Key akzeptiert wurde**
- Betätigen Sie die Taste "Close" um das Fenster zu schließen

**Ihre Software ist nun aktiviert und die DEMO Beschränkungen wurden aufgehoben**