



## Step 1: Download the software

- Download the software from here: [https://stute-engineering.de/index.php/en/download\\_en](https://stute-engineering.de/index.php/en/download_en)
- Select the desired product (text in blue), e.g. „Software DCX.Server & DCX.Client“
- Choose the software “Setup\_xxx.exe” from the displayed page

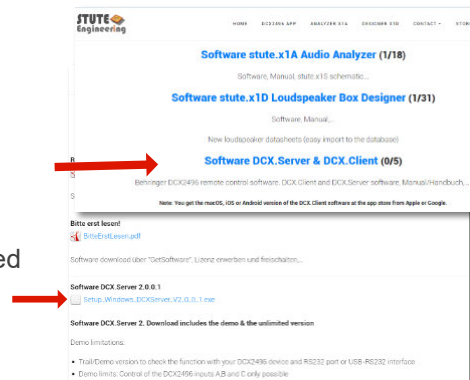

## Step 2: Install the software

- Execute the setup file “Setup\_xxx.exe”
- Confirm the MS-Windows messages as follows: Click on
  - "More Information" and
  - "Run anyway"
- Follow the instructions of the setup program
- Finally you find the program icon at the desktop or program menu

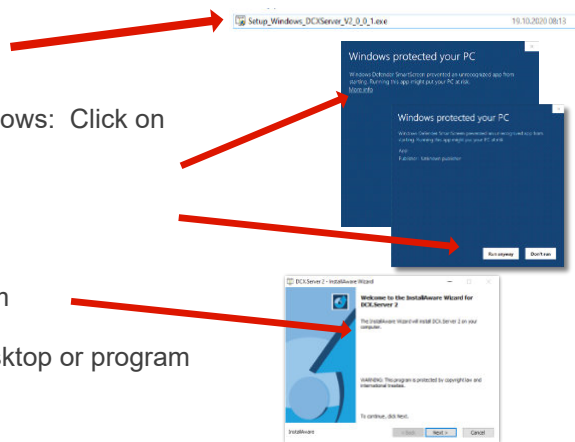


## Step 3: Activate the license

Your licence is not yet activated if the window shown below appears permanently after starting the programme.


### What is needed for activation?

The **invoice number** and the **installation key**.  
Double-click on the key number to copy the key to the clipboard.

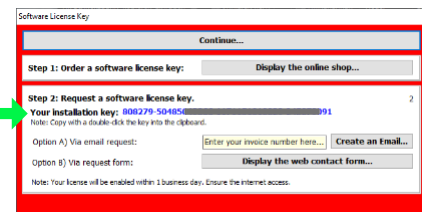

#### a) License via EMail

Click on the "Create an Email" button to create an email including the installation key. Send the email to the default address.

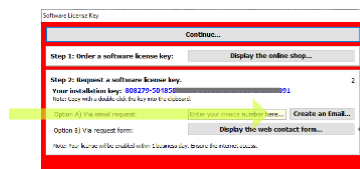

#### b) License via Web-Form

<https://stute-engineering.de/index.php/en/contact/license/>

Open the link or press the button „Display the web contact...“. Enter the required data. Submit the form.

**Note:** You will receive the activation of your licence within one business day. For this, the PC on which the software is installed must be connected to the Internet. You will be informed about the activation by eMail.

**Important:** Test the software in trial mode, before you activate your license. A refund is no longer possible once the licence has been activated.